


Distance



MAX. 4

mtr.

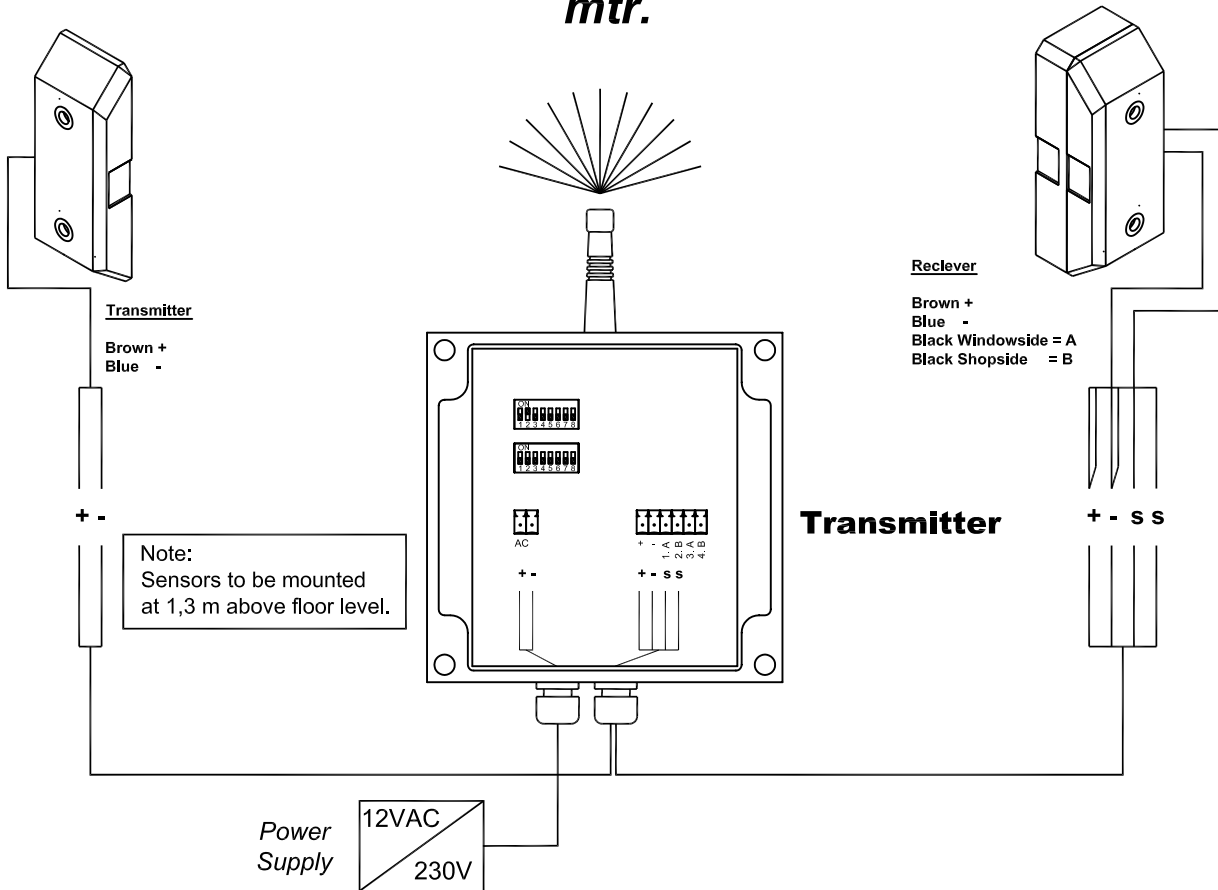

Settings transmitter



Settings receiver



SW 1 = Select sensor type
Only to be set at Transmitter

SW 2 = Location Address
Set the receiver and transmitter at the same address

